

Perforation Pattern Guide




Standard Perforation Patterns

- 4 page guide featuring patterns: A, B, C, D, E, F, G, H, I, J
- Pattern Allocation Form (*Rear Page*)
- *Indicative pattern styles used by all panelled bins*


Pattern A

Large Squares

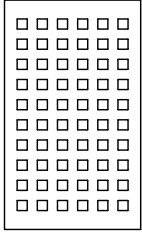


A

No Decal

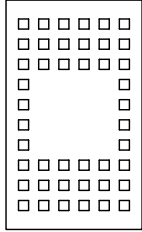


AS

Suit A4 Decal

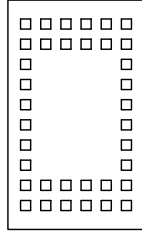


ALS

Suit A3 Decal

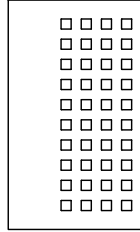


AVS

Suit Vertical
Decal

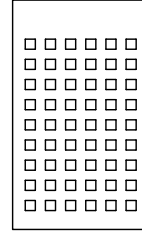


AHS

Suit Horizontal
Decal

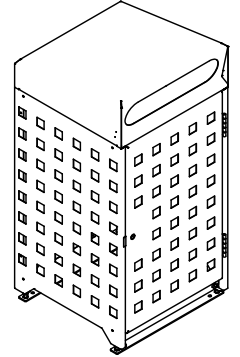


Pattern B

Large Diamonds

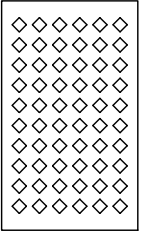


B

No Decal

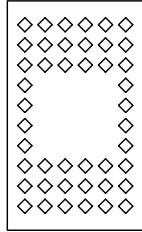


BS

Suit A4 Decal

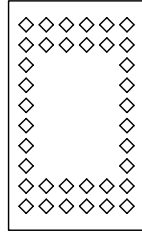


BLS

Suit A3 Decal

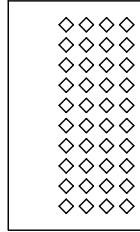


BVS

Suit Vertical
Decal

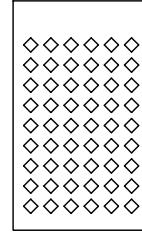


BHS

Suit Horizontal
Decal

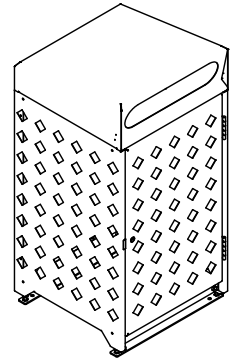


Pattern C

Small Squares

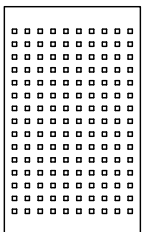


C

No Decal

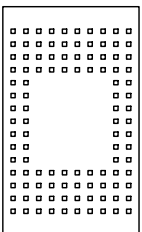


CS

Suit A4 Decal

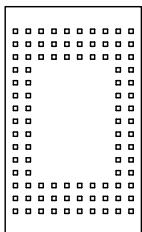


CLS

Suit A3 Decal

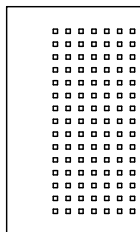


CVS

Suit Vertical
Decal

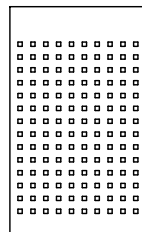


CHS

Suit Horizontal
Decal

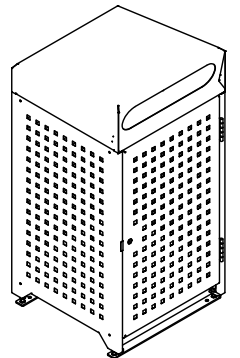


Pattern D

Small Diamonds

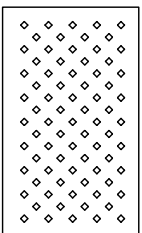


D

No Decal

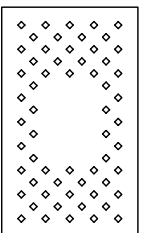


DS

Suit A4 Decal

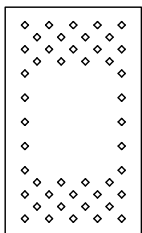


DLS

Suit A3 Decal

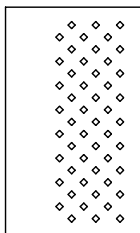


DVS

Suit Vertical
Decal

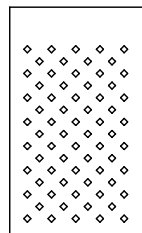

DHS

Suit Horizontal
Decal

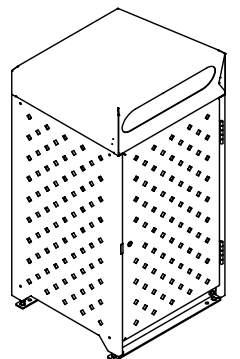

Perforation Pattern Guide




Standard Perforation Patterns

- 4 page guide featuring patterns: A, B, C, D, E, F, G, H, I, J
- Pattern Allocation Form (*Rear Page*)
- *Indicative pattern styles used by all panelled bins*


Pattern E

Small Circles

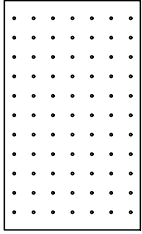


E

No Decal

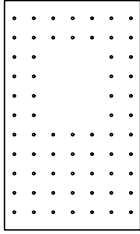


ES

Suit A4 Decal

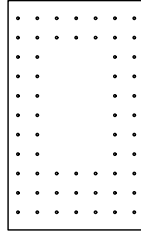


ELS

Suit A3 Decal

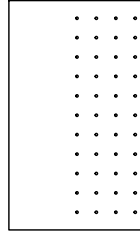


EVS

Suit Vertical Decal

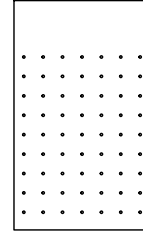


EHS

Suit Horizontal Decal

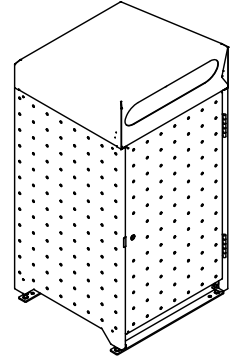


Pattern F

Vertical Slots

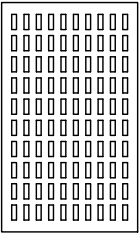


F

No Decal

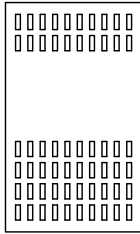


FS

Suit A4/A3 Decal

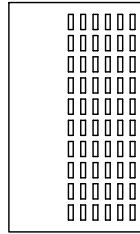


FVS

Suit Vertical Decal

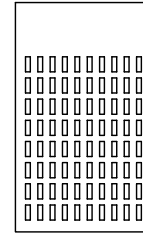


FHS

Suit Horizontal Decal

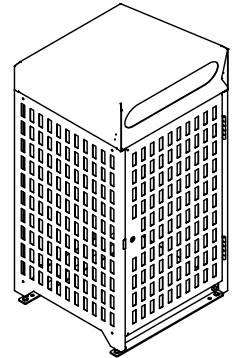


Pattern G

Short Horizontal Slots

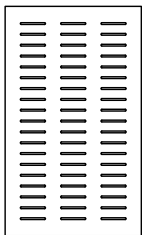


G

No Decal

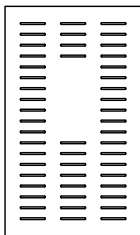


GS

Suit A4 Decal

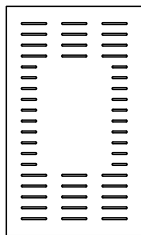


GLS

Suit A3 Decal

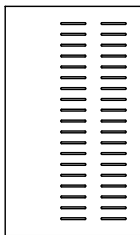


GVS

Suit Vertical Decal

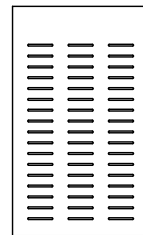


GHS

Suit Horizontal Decal

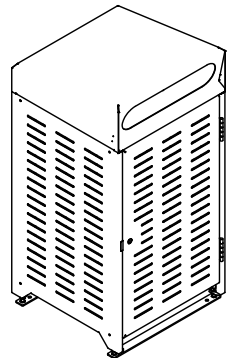


Pattern H

Medium Circles

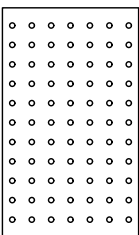


H

No Decal

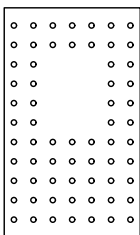


HS

Suit A4 Decal

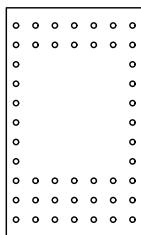


HLS

Suit A3 Decal

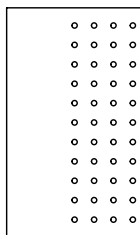


HVS

Suit Vertical Decal

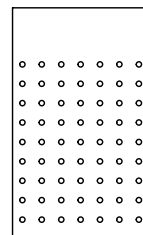

HHS

Suit Horizontal Decal

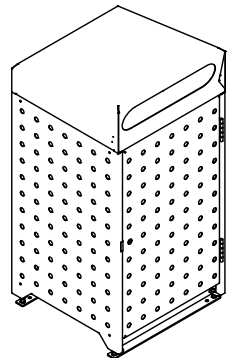

Perforation Pattern Guide


Standard Perforation Patterns

- 4 page guide featuring patterns: A, B, C, D, E, F, G, H, I, J
- Pattern Allocation Form (*Rear Page*)
- *Indicative pattern styles used by all panelled bins*




Pattern I

Alternating Triangles

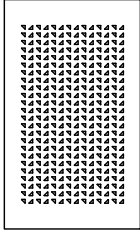


I

No Decal

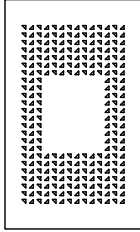


IS

Suit A4 Decal

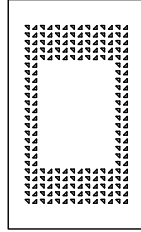


ILS

Suit A3 Decal

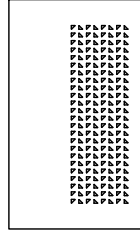


IVS

Suit Vertical
Decal

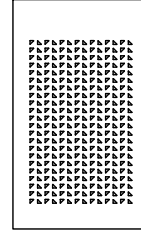


IHS

Suit Horizontal
Decal

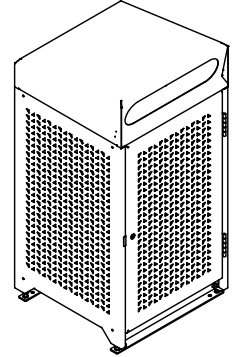


Pattern J

Offset Circles

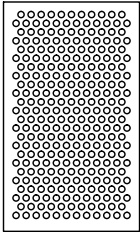


J

No Decal

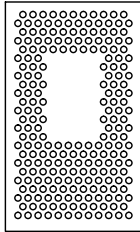


JS

Suit A4 Decal

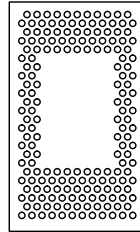


JLS

Suit A3 Decal

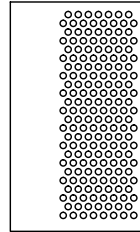


JVS

Suit Vertical
Decal

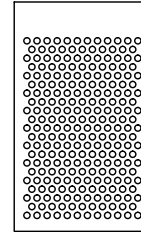

JHS

Suit Horizontal
Decal

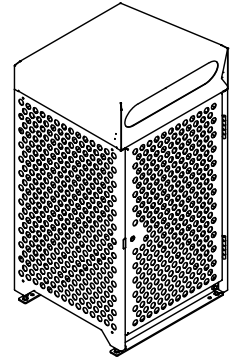

Perforation Pattern Guide

Standard Perforation Patterns

- 4 page guide featuring patterns: A, B, C, D, E, F, G, H, I, J
- Pattern Allocation Form (*Rear Page*)
- *Indicative pattern styles used by all panelled bins*




Bin Surround Panel Pattern Allocation

Customer :

Bin Model :

Job# :

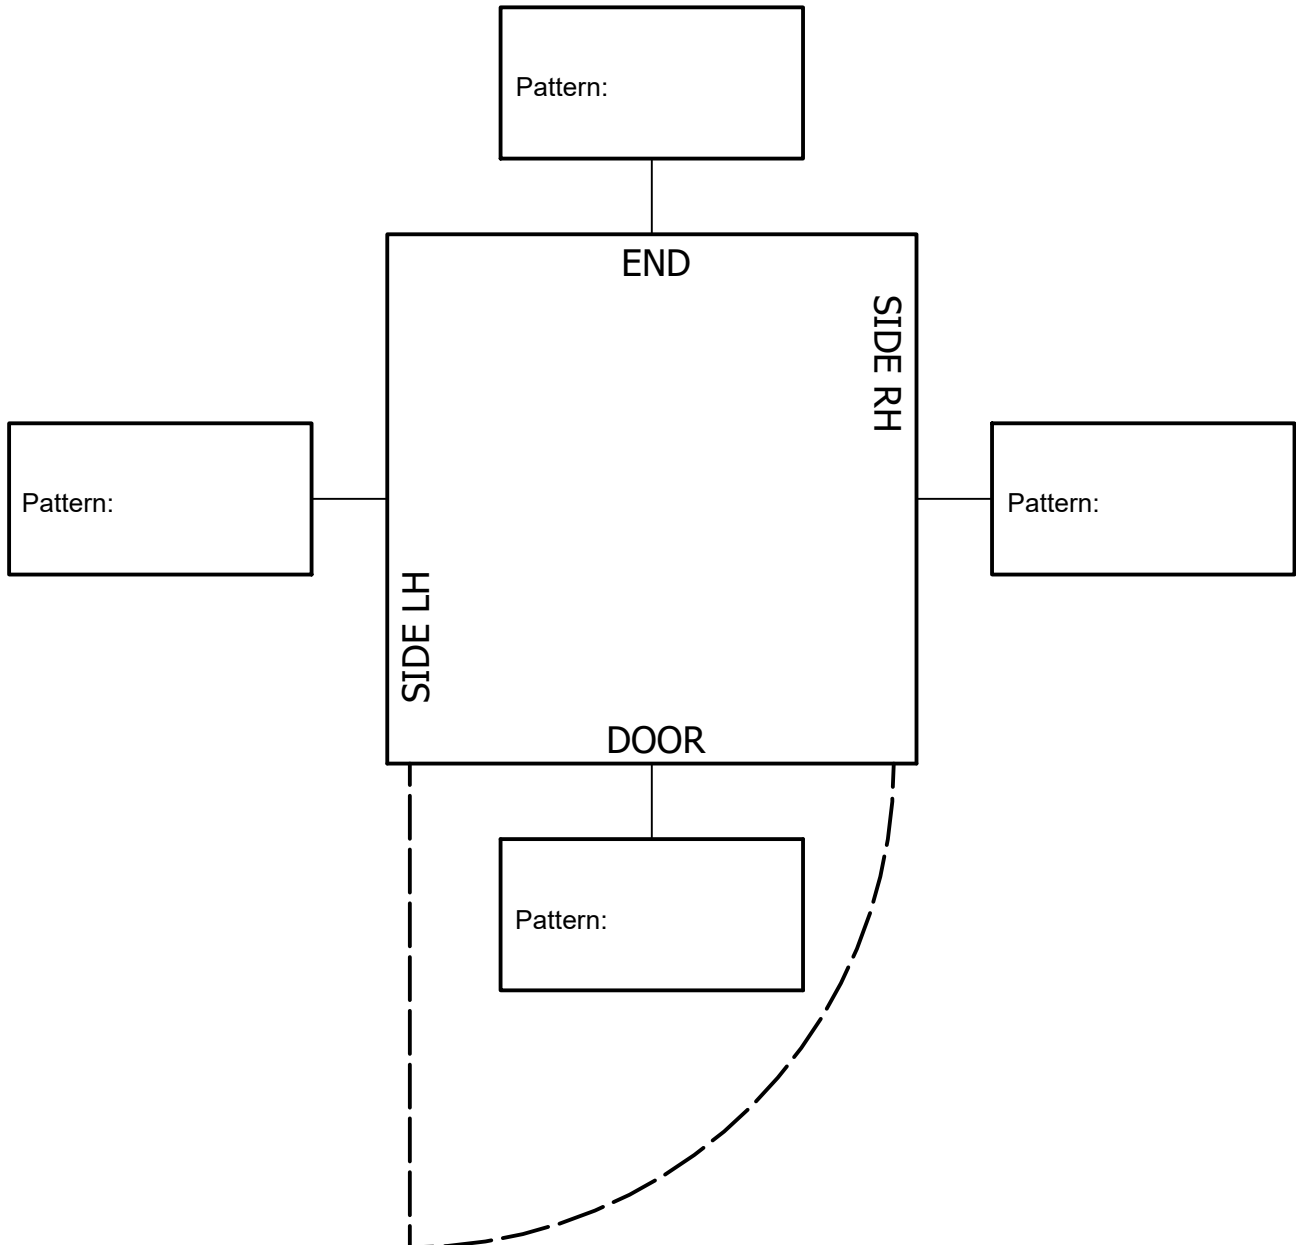

Bin models that accommodate perforation patterns:

- 800 series
- 888 Infinity Series (*side panels only*)
- 380 Round Bin
- 1200 Series
- 1500 Series
- 1600 Arena Series
- 1800 HUB Series
- Hobart Bin Surrounds (*Formerly Bushland*)

Please specify Perforation Pattern for every panel.

Default standard decal placement on door only.

Please specify if more than one decal is required.