

Modular Block Seat

Model 89076 - Modular Block Seat

DRAFFIN
Street Furniture



The Modular Block Seat is a portable bench with plenty of options to style it your way. It can be surface mounted and/or locked together to arrange in a permanent installation. Side panels with an assortment of standard patterns, and a battened top with alternate options for the battens to be mounted to the sides.

Batten Material (See batten guide)

65mmx19mm

- Spotted Gum
- Enviroslat
- Anodised Aluminium
- Powdercoated Aluminium (See colour guide)
- Timber-Look Aluminium - Alpine Ash
- Timber-Look Aluminium - Mountain Gum
- Timber-Look Aluminium - Ironbark

Block Seat Configuration

Sides or Ends with Battens (See next page)

- Type A - 1 x Side with Battens
- Type B - 1 x End with Battens
- Type C - All Sides/End with Battens
- Type D - No Sides/Ends with Battens
- Type E - 2 x Sides with Battens
- Type F - 2 x Ends with Battens
- Type G - 2 x Sides, 2 x Ends with Battens
- Type H - 1 x Side, 2 x Ends with Battens
- Type I - 1 x Side, 1 x End with Battens




Mounting Options

- Bolt-down
- Freestanding
- Inground Anchors


Panel Perforations (See next page)

Zinc Plated Mild Steel Panels, Powdercoated


- (A) 40mm Square
- (B) 40mm Diamond
- (C) 20mm Square
- (D) 20mm Diamond
- (E) 10mm Circle
- (F) 60mm x 19mm Rectangle
- (G) 7mm x 97mm Slot
- (H) 20mm Circle
- (J) 25mm Offset Round
- Blank
- Custom

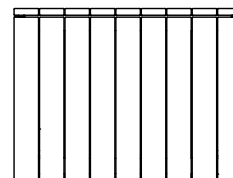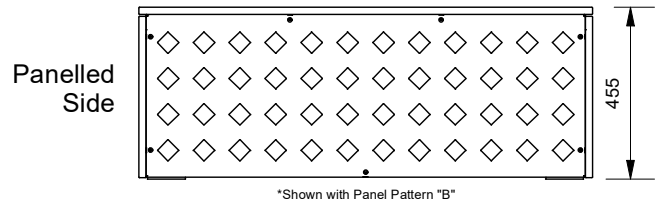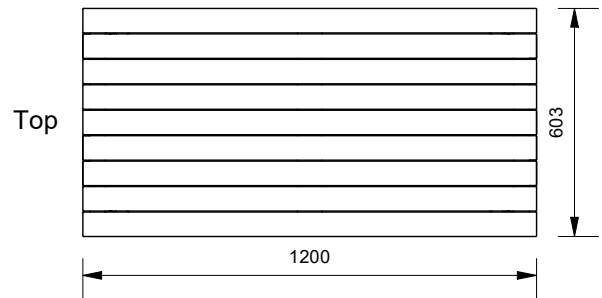

Battened End

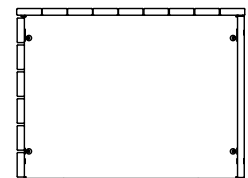

Panelled End

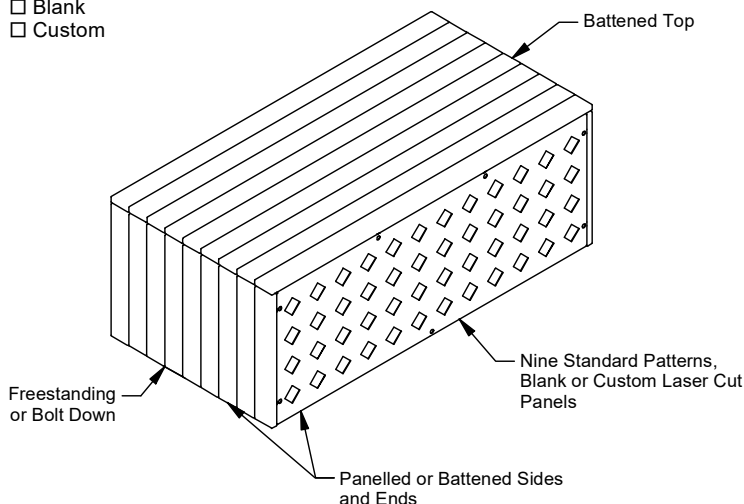

More information:
Go to the website for spec inspiration.
89076 - Modular Block Seat
<https://draffin.com.au/product/modular-block-seat/>

Batten Guide
<https://draffin.com.au/batten-guide/>

Colour Guide
<https://draffin.com.au/colour-guide/>

Modular Block Seat

Model 89076 - Modular Block Seat



Block Seat Configuration

Modular Block Seats are topped with your choice of batten material. However, the sides can be optioned with battens, or panels with laser cut patterns and motifs. Choose from the configurations below:

Batten Material (See batten guide)

65mmx19mm

- Spotted Gum
- Enviroslat
- Anodised Aluminium
- Powdercoated Aluminium (See colour guide)
- Timber-Look Aluminium - Alpine Ash
- Timber-Look Aluminium - Mountain Gum
- Timber-Look Aluminium - Ironbark

Block Seat Configuration

Sides or Ends with Battens*


- Type A - 1 x Side with Battens
- Type B - 1 x End with Battens
- Type C - All Sides/End with Battens
- Type D - No Sides/Ends with Battens
- Type E - 2 x Sides with Battens
- Type F - 2 x Ends with Battens
- Type G - 2 x Sides, 2 x Ends with Battens
- Type H - 1 x Side, 2 x Ends with Battens
- Type I = 1 x Side, 1 x End with Battens

*note: sides or ends without battens will have steel panels

Type A - 89076/A
1 x Side with Battens




Type B - 89076/B
1 x End with Battens

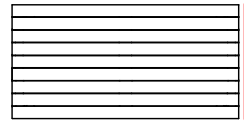

Type C - 89076/C
All Sides/Ends with Battens




Type D - 89076/D
No Sides/Ends with Battens

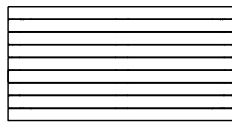

Type E - 89076/E
2 x Sides with Battens




Type F - 89076/F
2 x Ends with Battens

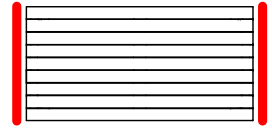


Type G - 89076/G
2 x Sides, 1 x End with Battens



Type H - 89076/H
1 x Side, 2 x Ends with Battens

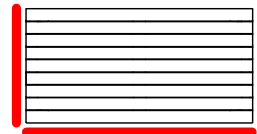

Type I - 89076/I
1 x Side, 1 x End with Battens

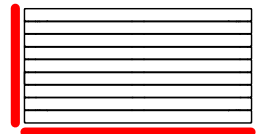


Panel Perforation Patterns

on Zinc Plated Mild Steel - Powdercoated


Panel Perforations

- (A) 40mm Square
- (B) 40mm Diamond
- (C) 20mm Square
- (D) 20mm Diamond
- (E) 10mm Circle
- (F) 60mm x 19mm Rectangle
- (G) 7mm x 97mm Slot
- (H) 20mm Circle
- (J) 25mm Offset Round
- Blank
- Custom


A

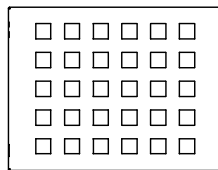


B

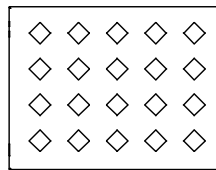


C

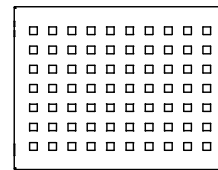


D

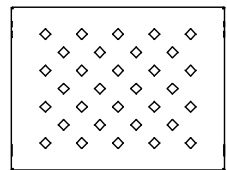


E

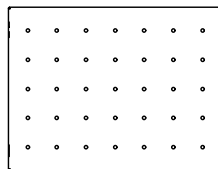


F

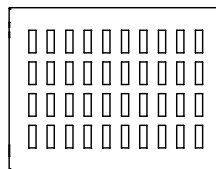


G

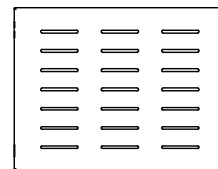


H

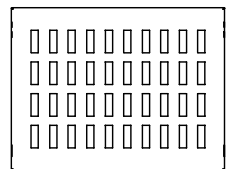

J

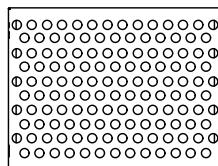

BLANK

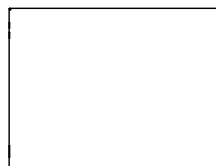

CUSTOM

